



Electronic Drum Set

Instruction Manual

Model #: DRMD

Ages
3+



Diagram:

- | | |
|-----------------------------|---------------------------|
| 1. Drum pads | 7. Speakers |
| 2. On/Off button | 8. Volume control buttons |
| 3. Rhythm selection buttons | 9. Stop button |
| 4. Tempo control buttons | 10. Demo song button |
| 5. Drumsticks | 11. Battery compartment |
| 6. Drumstick holders | 12. AUX-In Cable |



How to Play The Do-Re-ME![™] Electronic Drum Set

To Start: Press the On/Off button, the drum is ready to play.

Rhythm Buttons: Press a rhythm button to add a background rhythm. Press a different rhythm button to change the rhythm style. Press the right side of tempo button to speed up the tempo of the rhythm. Press the stop button to stop the rhythm.

Demo Song Button: Press the demo button to hear a demo song. Press this button again to hear a different demo song. Repeat for up to ten different demo songs. Press the stop button to stop the demo song.

Stop Button: Press the stop button to stop any function and resume normal play.

Volume Control Buttons: Press the left side of volume button to decrease the volume. Press the right side of volume button to increase the volume.

Tempo Control Button: Press the left side of the tempo button to slow down the tempo of the rhythm. Press the right side of the tempo button to speed up the tempo of the rhythm. Press the stop button to stop the rhythm.

Sleep Mode: When the unit is inactive for approximately 5 minutes, it will go into sleep mode to save battery power.

How to Connect the Audio Cable with a Media Player:

- Pull out the audio cable from the bottom of drum set. Connect it to the headphone jack of a media player. Use the media player as you normally would. When playing a selected song on the media player, the sound will emit from the Do-Re-ME! drum speakers, allowing you to play the drums along to the music!



Battery Installation:

- Make sure the Do-Re-ME![™] Electronic Drum Set is turned Off.
- Use a screwdriver to open the battery cover located at the bottom of the speaker module.
- Install the required batteries according to the diagram inside the battery compartment. Alkaline batteries are recommended.
- Replace and secure the battery cover.

Battery Notice:

- The use of rechargeable batteries is not recommended.
- Do not mix old and new batteries.
- Do not mix alkaline, standard (carbon zinc) or rechargeable batteries (if applicable).
- Batteries are to be inserted according to the correct polarity (+ and -). Incorrect insertion can damage the unit, cause fire or batteries to explode.

Care and maintenance:

- Keep the unit clean by wiping it with a dry cloth, or use non-alcohol solutions. We recommend HygenX™ Universal Cleaner - chemical-free, alcohol-free, ammonia-free cleaner. Safe for kids and the environment.
- Keep the unit out of direct sunlight and away from any direct heat source.
- Low battery may cause the unit to operate improperly, or may weaken the sound performance. If this occurs, replace with a new set of batteries.

Disposal:

If ever discarding this unit, please follow your local recycling regulations.

Please keep all information for future reference.

Product Registration Instructions



Visit: www.HamiltonBuhl.com

1. Click on Customer Care
2. Click on Product Registration Form
3. Please fill out all fields marked with * to register your product

Warranty:

Warranty begins the date item ships from our warehouse. All products have a one year warranty from original date of shipment, unless otherwise noted.



80 Little Falls Road
Fairfield, NJ 07004
1-800-631-0868
www.HamiltonBuhl.com