 


Linda Electric Screen User Manual

Product Electrical Specification

Voltage: 100V~120V, 60Hz

Power: 210W (MAX)

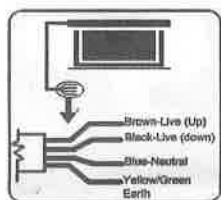

Installation Method

Install the screen in the location where the audience can see the whole screen when it is fully extended.

 
 
The screen can be wall or ceiling mounting, users can choose the most suitable mounting method according to their needs. Insure the right equipment is used for whichever chosen method.

For mounting on a wooden surface, use $\varnothing 6 \times 50$ mm wood screws.


For mounting on a brick, concrete or plaster surface, use $\varnothing 6 \times 60$ mm screws with screw anchors or wall plugs.

Ceiling / Wall Mounting:


Unscrew the "I" beam and slide it out from the Aluminum casing. Detach the "L" shape mount from the casing. Align and drill the L-mounts onto the ceiling/wall. Recommended distance of "A" is around 1/3 of the total length of the casing. Hang the casing onto the back-hook of the L-mount. Slide the "I" beam back to the middle position of the L-mount and fasten it with the tools and screws provided.

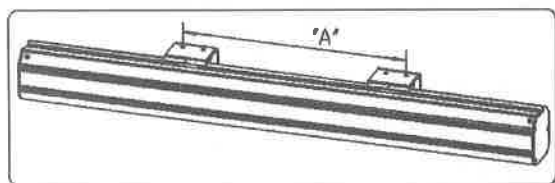

Ceiling Mounting

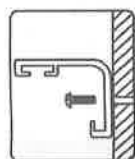 

Wall Mounting

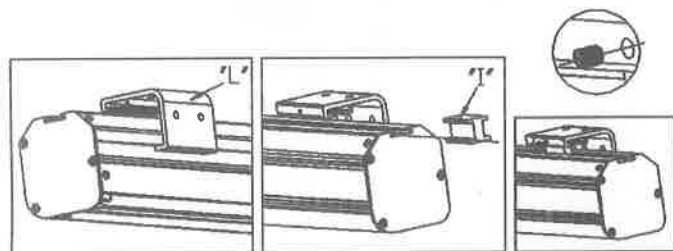 

Screen Operation

Wired control unit operation (Fig. 1)

Plug power cord into mains socket. (Make sure the correct voltage is supplied.) Position the cord so that it will not be tripped over, pulled or contact hot surfaces. If an extension cords is needed then use a cord with the same current rating.

 
To lower the projection surface (Fig. 2)

Toggle the switch to position $< \equiv >$, the projection surface will lower itself, when it is fully extended it will stop automatically.

To retract the projection surface (Fig. 3)

Toggle the switch to position $< - >$, the projection surface will retract into its case, when it is fully retracted it will stop automatically.

To stop the projection surface manually at an intermediate position, toggle the switch to the $< \bigcirc >$ position.

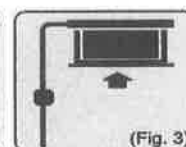

Wireless control unit operation (Fig. 4)

To lower the projection surface

 
Press the bottom button on the control unit, the projection surface will lower itself, when it is fully extended it will stop automatically.

To retract the projection surface

Press the top button on the control unit, the projection surface will retract into its case, when it is fully retracted it will stop automatically.


To stop the projection surface

Manually at an intermediate position, press the middle button on the control unit.

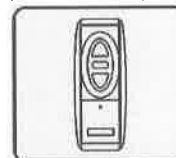

(Fig. 4)

 Built-in control board manual control

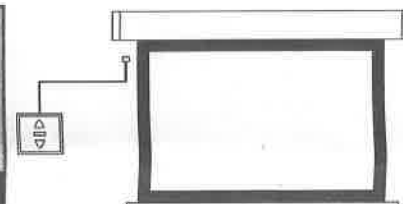

Adjusting method



Lower limit—Adjust the stopping level of slat when fully extend. Turn "lower limit" switch in clockwise direction let the slat go closer to the ground.

Upper limit—Adjust the stopping level of slat when fully retract. Turn "upper limit" switch in clockwise direction let the slat go closer to the casing.

