


Instructions
Flat Panel TV Cart
Model #: PLCAB4226E

Warranty begins the date that the item ships out of our warehouse. Metal carts have a limited lifetime warranty on all housing components; however, carts have a one year warranty on any electrical/mechanical components.
Note: This unit is easier to assemble with two people.

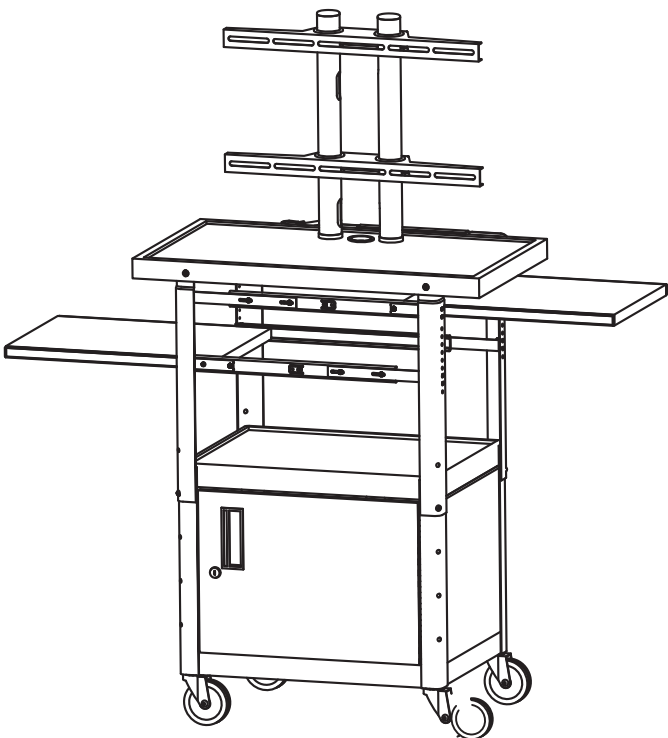

PLCAB4226E

Parts list

Qty.	Description	Qty.	Description
1	Top shelf	9 Set	Phillips head bolt, washer and hex nut (I)
4	Top legs	8 Set	Screw and serrated nut (K)
1	Bottom shelf section	2	Casters with brakes
2	Poles for supporting flat panel TV	2	Casters without brakes
2	Horizontal mount	2	Security screws for mounting the poles (F)
1	Electrical bracket	2	Security screw (G)
1	Power cord	2	Hex head screw (H)
3	Screws and hex nuts (E)	2 Set	Pull out shelf



Pole



Horizontal mount

⚠ PROP 65 WARNING: This product contains the chemical known to the State of California to cause cancer and birth defects or other reproductive harm.

Screw table


Some screws may have already been screwed on the related parts.

A		M4 x 12	G		M10 x 20
B		M5 x 12	On the top horizontal mount		
C		M6 x 12	H		M10 x 20
D		M8 x 16	On the bottom horizontal mount		
E		M5 x 45	I		M6 x 16
F		M8 x 20	J		M4 x 12
On the pole			On the pull out shelf		
			K		M6 x 12


Tools required

L key
Adjustable wrench/pliers
Rubber mallet


WARNING: Please keep the TV mounting screws A, B, C & D and the L keys in a secure location as they may be required for use with the flat panel TV at a later time.

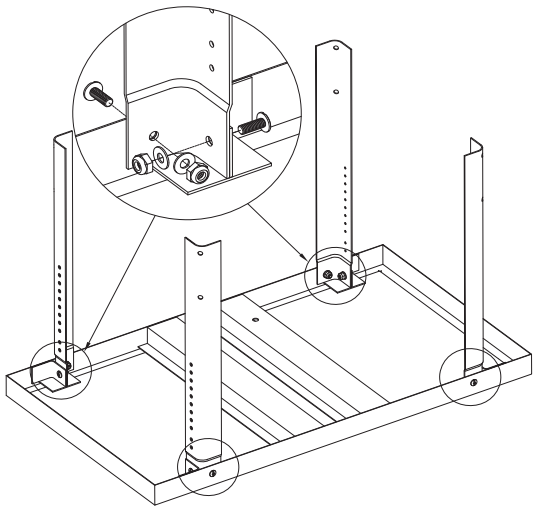

1. Insert top legs onto top shelf. Tighten top legs with screws, washer and nuts (see screw table K) as shown.

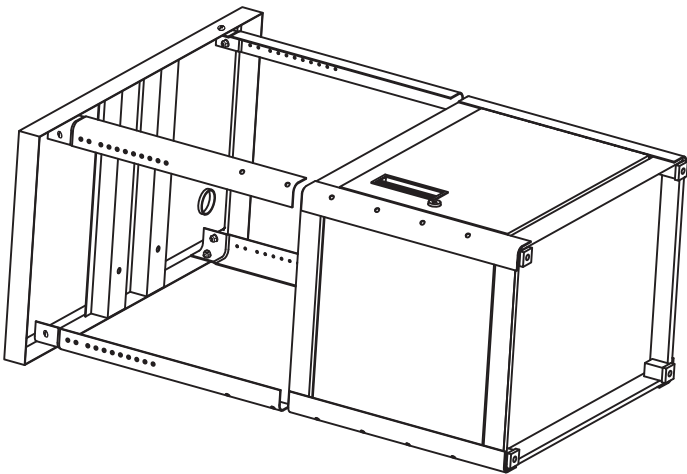


2. Insert top table section onto bottom section.

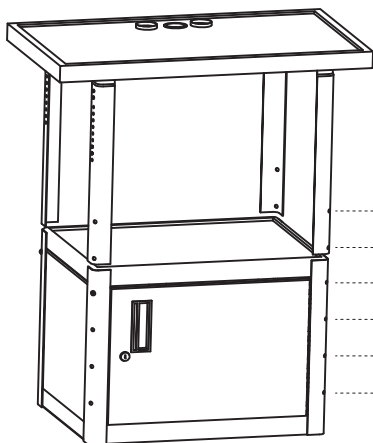


Desired Unit Height	Use These Corresponding Holes
26"	1&D
30"	1&C or 2&D
34"	1&B or 2&C
38"	1&A or 2&B
42"	2&A


3. Align corresponding holes of unit to obtain desired height.

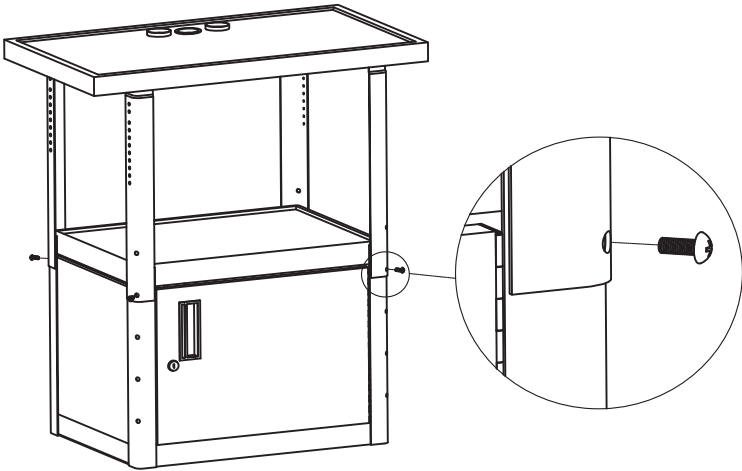

4. Insert two bolts, washer and nuts (see screw table I) into each leg of table. Washer should be on the inside of leg. Tighten all bolts and nuts.

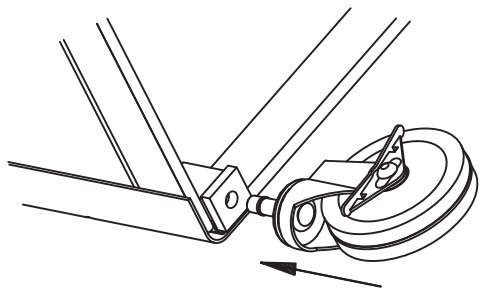


5.
Lay unit on floor. Insert casters with brakes into opposite corner holes in the bottom of the unit. Insert other casters into remaining holes of unit.

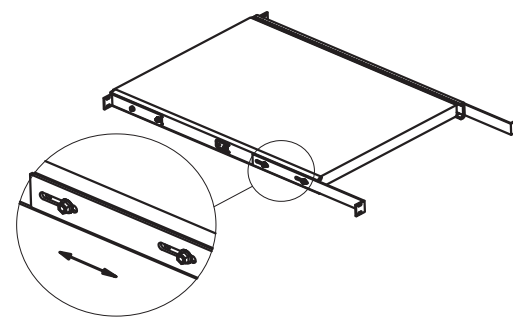

6 A. Pull-out shelf assembly instruction

Due to limited packaging space, pull-out shelf was shortened. Adjust the pull-out shelf out to the maximum inside width of the cart inside, as the pull-out shelf will be installed on the inside part of the legs.

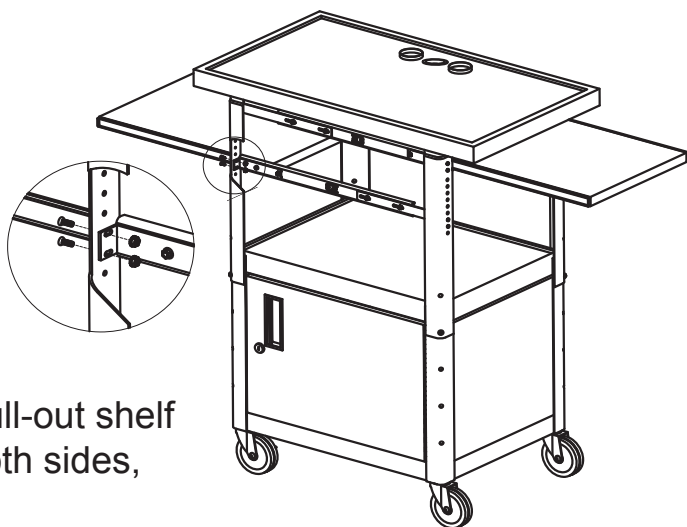


6 B.

Tighten the pull-out shelf onto leg on both sides, as shown.



7.

Insert the two supporting poles onto the holes on the top shelf. Wire holes can face inside or outside.

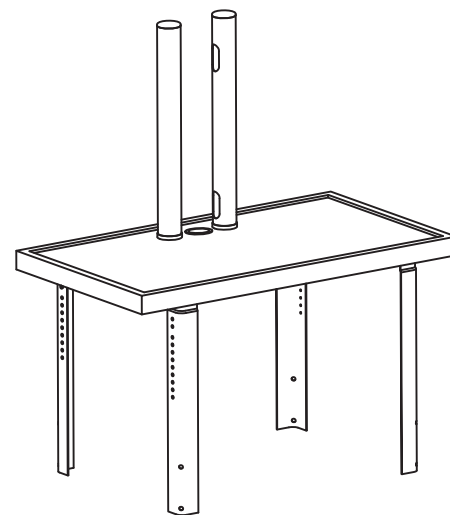


8.

Insert the two horizontal mounts onto the supporting poles. Note: The mount with adjustable screw (see screw table H) should go on the bottom. Screw (see screw table G) the top mount to desired height from A to F. Adjust the bottom mount height according to the TV screw position as shown.

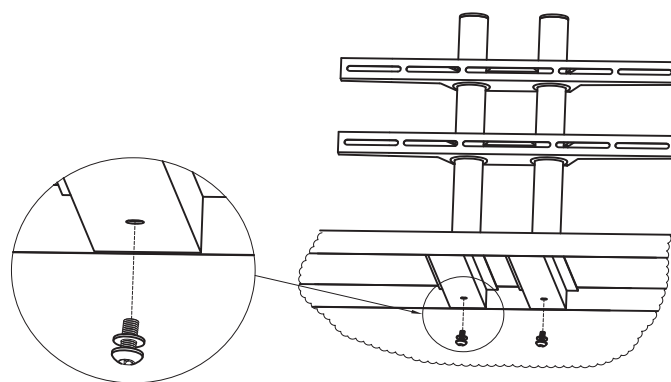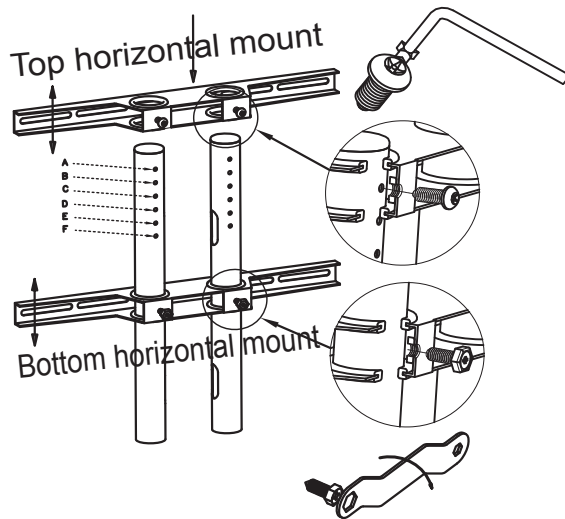

9.


Tighten the two supporting poles onto the top shelf with two security screws (see screw table F) as shown.

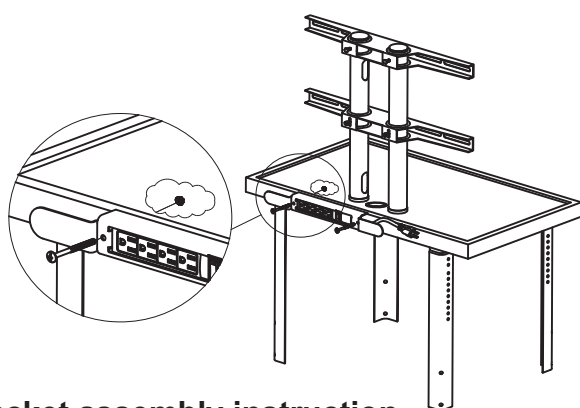

10.

Electrical bracket assembly instruction

- A. Push power cord into cord winder bracket.
B. Attach electrical bracket to back side of top shelf with two nuts and bolts (see screw table E). Tighten nuts and bolts securely. Wrap the power cord around the bracket wings.

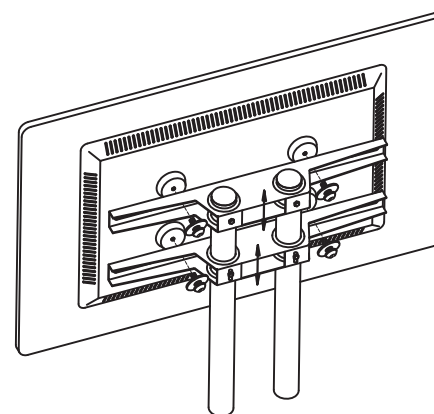

11.

Use the appropriate security screws needed (M4, M5, M6 or M8, see screw table A,B,C or D) to fasten the flat panel TV onto the horizontal mounts as shown.



WARNING: Please keep the TV mounting screws A, B, C & D and the L keys in a secure location as they may be required for use with the flat panel TV at a later time.